



INSTALLATION

G U I D E

IRON WORKS™
HISTORIC
CLAW FEET

THE BOLD LOOK
OF **KOHLER**®

RECOMMENDED TOOLS AND MATERIALS



Adjustable
Wrench

8 x 8 x 28" Blocks for
supporting bath

BEFORE YOU BEGIN


⚠ CAUTION: Risk of personal injury. Cast iron baths are extremely heavy. Wear appropriate safety equipment when installing this product.

⚠ CAUTION: Risk of personal injury or product damage. Cast iron baths are extremely heavy. Get help lifting this product.

1. INSTALL FEET

⚠ CAUTION: Risk of product damage. Use care to avoid damaging the painted finish of the bath.

Position two 8 x 8 x 28" blocks on the floor side by side. With help, carefully lift the bath onto the blocks, and balance the bath so the area around the lugs is clear.

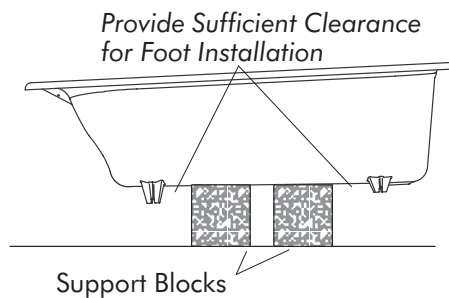

NOTE: The bath feet are not interchangeable. The feet are marked (FL, FR, BL, BR) for easy identification.

Locate both front feet (FL and FR) for the drain end of the bath.

Align one of the front feet with the correct bath lug.



Insert a bolt and washer through the bath lug slot and into the foot hole. Securely wrench tighten the bolt.

Repeat for the other front foot.

Repeat these steps for the back feet (BL and BR).

Complete the bath installation by following the installation instructions packed with the bath.

NOTE: When the bath is in its permanent location, use the leveling bolts to level the bath. Then tighten the lock nuts against the bottom of the feet.

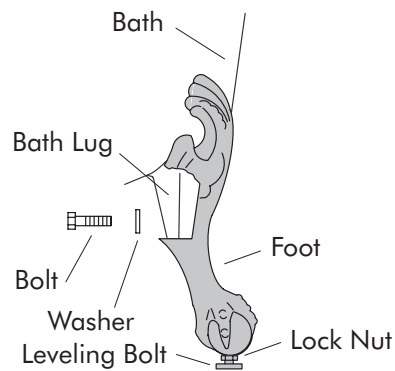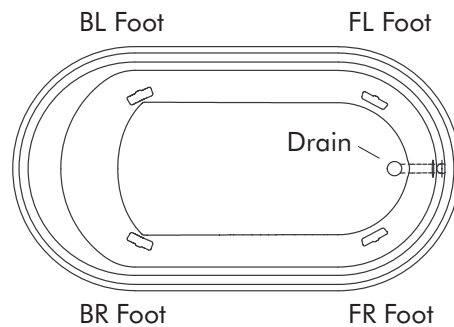

CALL US FOR HELP

Questions? Problems? First review the installation instructions to ensure correct installation. For additional assistance, call our Customer Service Department for direct help. You may also contact us at our web site listed below.

In the U.S.A., call 1-800-4-KOHLER
In Mexico, call 001-877-680-1310
In Canada, call 1-800-964-5590

THE BOLD LOOK
OF **KOHLER**®

www.kohlerco.com